

UNIT[®]
GARAGE

cod. 1624
Cupolino basic
Basic windshield




ATTENZIONE!

Leggere attentamente il foglio *'Informazioni importanti'* prima di procedere.

WARNING!

Carefully read the *'Important informations'* sheet before starting.

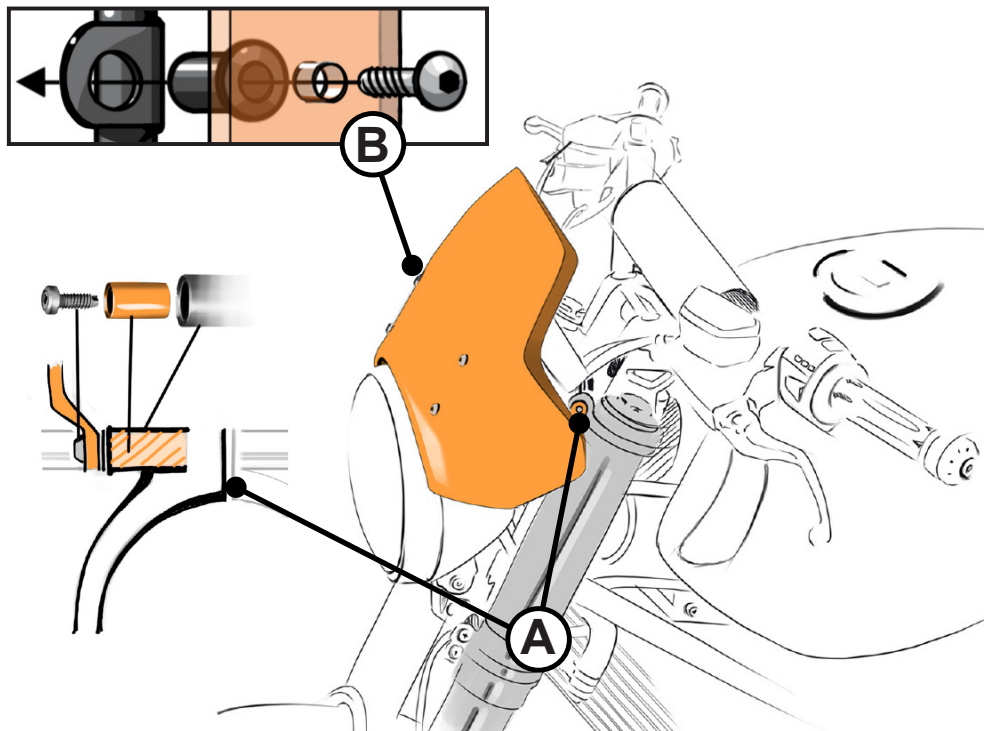

EN Remove the original screw from the triple clamp on both sides. Insert the supplied spacer and mount the headlight fairing using the 2 screws supplied (A). The headlight fairing is mounted to the frame with 4 screws (B).

IT Rimuovere la vite originale dalla piastra forcella su entrambi i lati. Inserire il distanziale in dotazione e montare il cupolino utilizzando le 2 viti in dotazione (A). Il cupolino è montato al telaio con 4 viti (B).

UNIT[®]
GARAGE

cod. 1624
Cupolino basic
Basic windshield




ATTENZIONE!

Leggere attentamente il foglio *'Informazioni importanti'* prima di procedere.

WARNING!

Carefully read the *'Important informations'* sheet before starting.

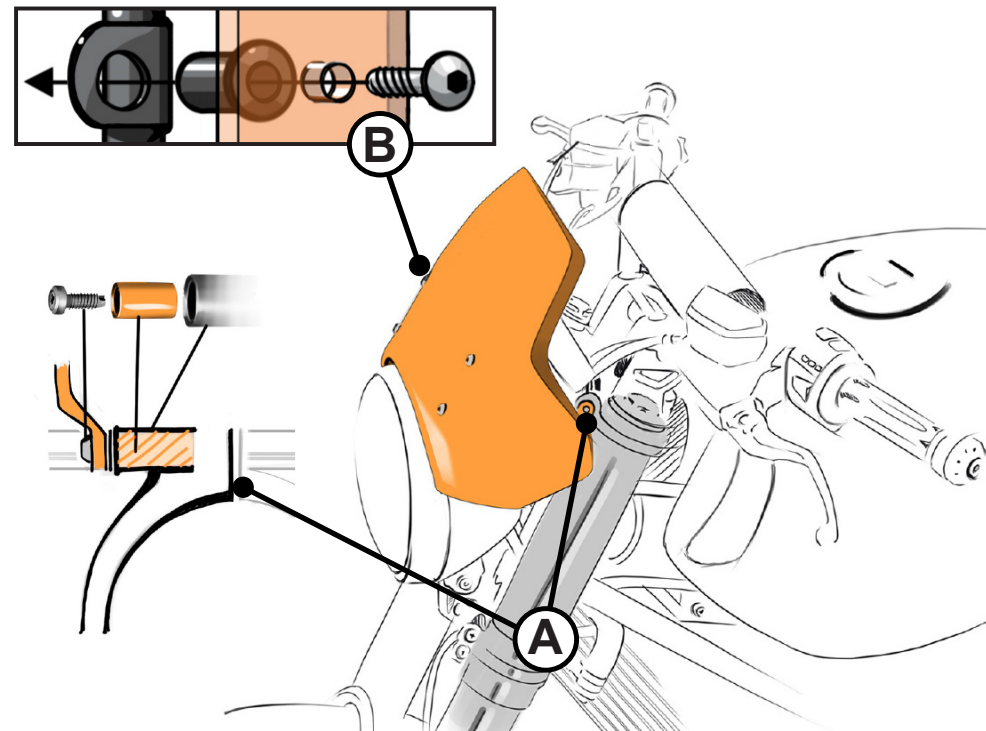

EN Remove the original screw from the triple clamp on both sides. Insert the supplied spacer and mount the headlight fairing using the 2 screws supplied (A). The headlight fairing is mounted to the frame with 4 screws (B).

IT Rimuovere la vite originale dalla piastra forcella su entrambi i lati. Inserire il distanziale in dotazione e montare il cupolino utilizzando le 2 viti in dotazione (A). Il cupolino è montato al telaio con 4 viti (B).