


EN_Assemble the pipe as pictured below. Connect to the mounting point on the passenger frame. Do not forget to connect the safety wire!

IT_Montare il Marmitta come illustrato di seguito. Connettersi al punto di montaggio sul telaio del passeggero. Non dimenticare di collegare il cavo di sicurezza!

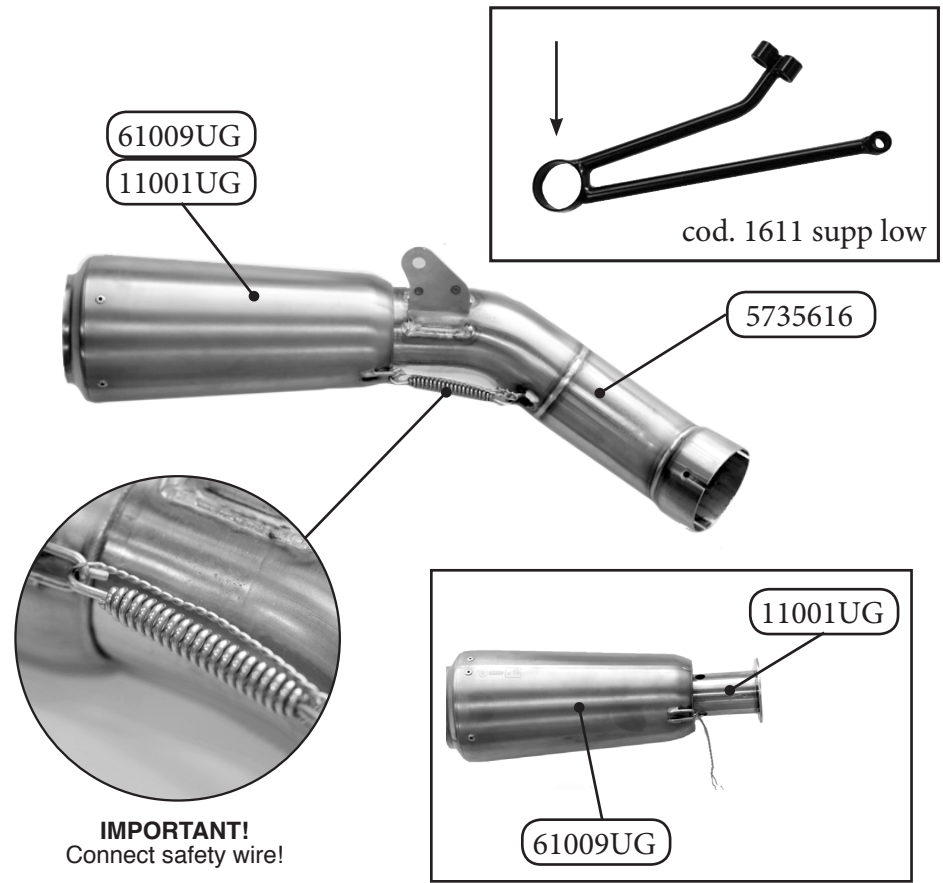

EN_Assemble the pipe as pictured below. Remove the rubber ring from the original passenger frame and place it in the subframe (cod. 1611 supp low) Do not forget to connect the safety wire!

IT_Montare il tubo come illustrato di seguito. Rimuovere l'anello di gomma dal telaio passeggero originale e inserirlo nel nostro supporto (cod. 1611 supp basso) Non dimenticare di collegare il cavo di sicurezza!