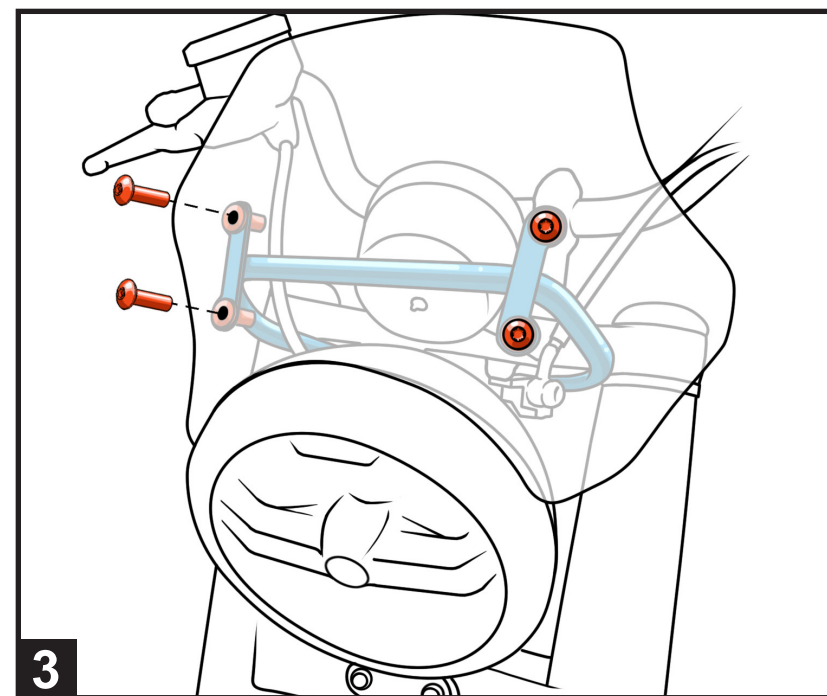
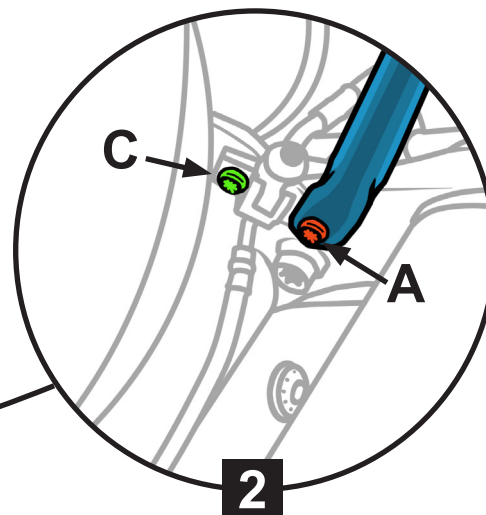
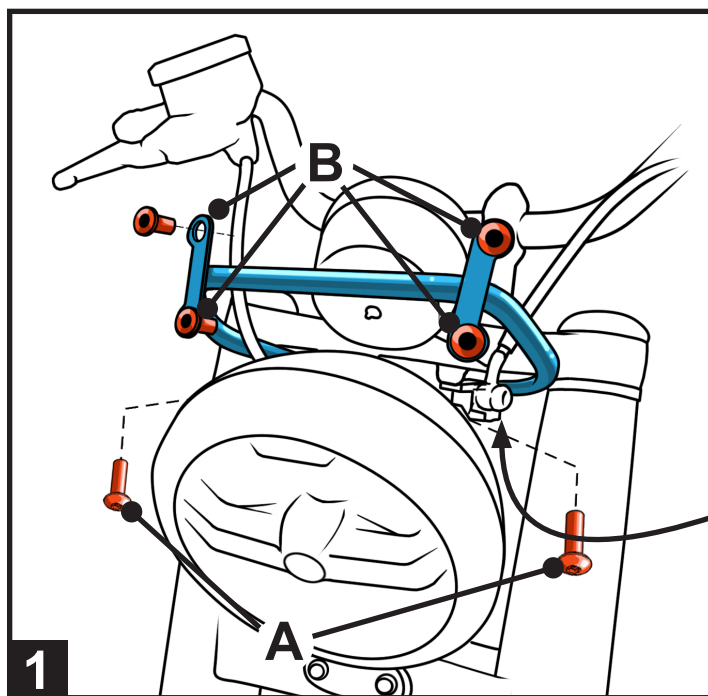


**ATTENZIONE!**Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.**WARNING!**Carefully read the '*Important informations*' sheet before starting.

EN_For an easy installation, loosening the brake line supports by removing the screw in C in fig.2 on both sides of the bike.

Then remove screws in A as shown in fig. 2 on both sides of the bike.

Position the frame facing up and secure it to the bike using the screws in A.

Reinstall the original brake line support (image 2). Now insert the 4 wellnuts in B (image 1) and fix the windshield onto them using the 4 screws supplied in the kit. (image 3)

IT_Per facilitare il lavoro, iniziare smontando la vite C (fig. 2) che fissa i tubi freno.

Smontare poi la vite A in fig. 2 da entrambe i lati della moto.

Posizionare il telaio rivolto verso l'alto e fissarlo alla moto con le viti A.

Fissare nuovamente i tubi freno con le viti C. Ora inserire i 4 wellnuts nei fori B e fissare il cupolino su di essi, usando le 4 viti D in dotazione nel kit

