

UNIT[®]
GARAGE

cod. 3700
Telai laterali BMW CE04
BMW CE04 side frames




ATTENZIONE!

Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.

WARNING!

Carefully read the '*Important informations*' sheet before starting.

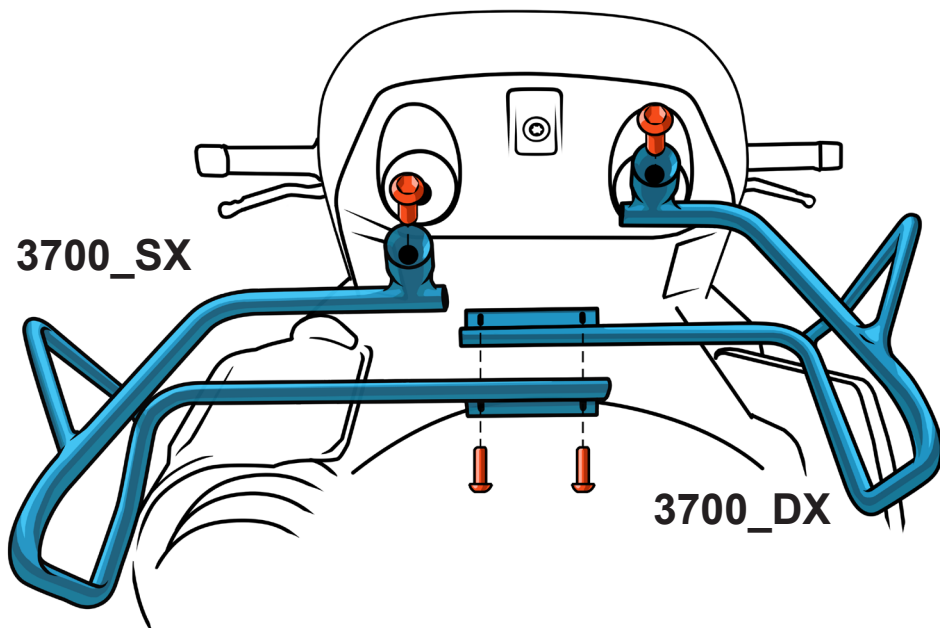

EN Remove the original screws from the back of the seat. Position the right or left frame and secure it with 3 M8x35 screws.

In case of a combined installation, mount the right frame first, then the left one. Secure both frames with 4 M8x35 screws.

IT Rimuovere le viti posteriori sotto la sella. Posizionare il telaio DX o SX e fissarlo con 3 viti M8x35.

Nel caso di montaggio di entrambe i telai combinati, montare prima il destro e poi il sinistro come indicato nello schema, utilizzando 4 viti M8x35.

UNIT[®]
GARAGE

cod. 3700
Telai laterali BMW CE04
BMW CE04 side frames




ATTENZIONE!

Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.

WARNING!

Carefully read the '*Important informations*' sheet before starting.

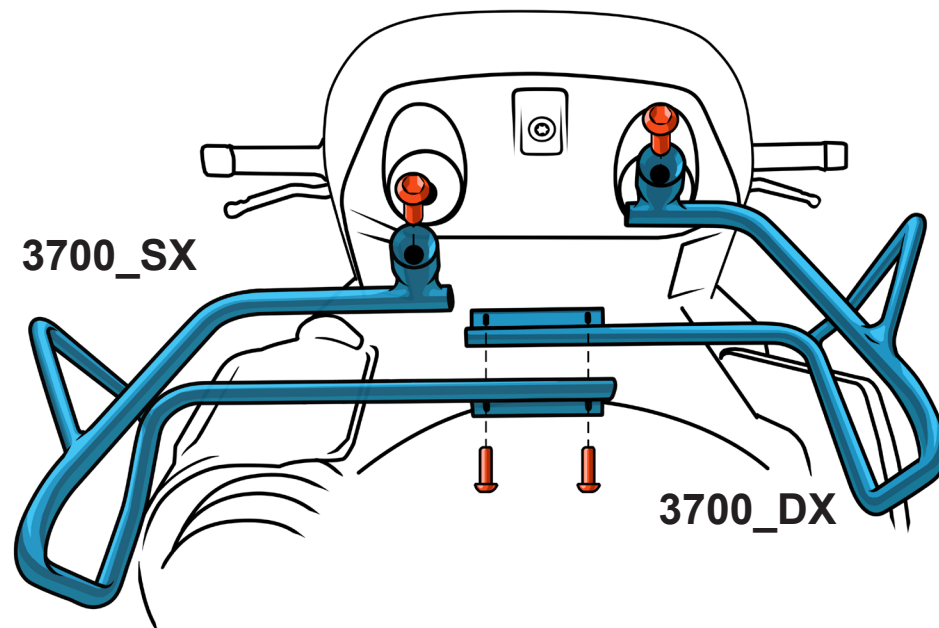

EN Remove the original screws from the back of the seat. Position the right or left frame and secure it with 3 M8x35 screws.

In case of a combined installation, mount the right frame first, then the left one. Secure both frames with 4 M8x35 screws.

IT Rimuovere le viti posteriori sotto la sella. Posizionare il telaio DX o SX e fissarlo con 3 viti M8x35.

Nel caso di montaggio di entrambe i telai combinati, montare prima il destro e poi il sinistro come indicato nello schema, utilizzando 4 viti M8x35.