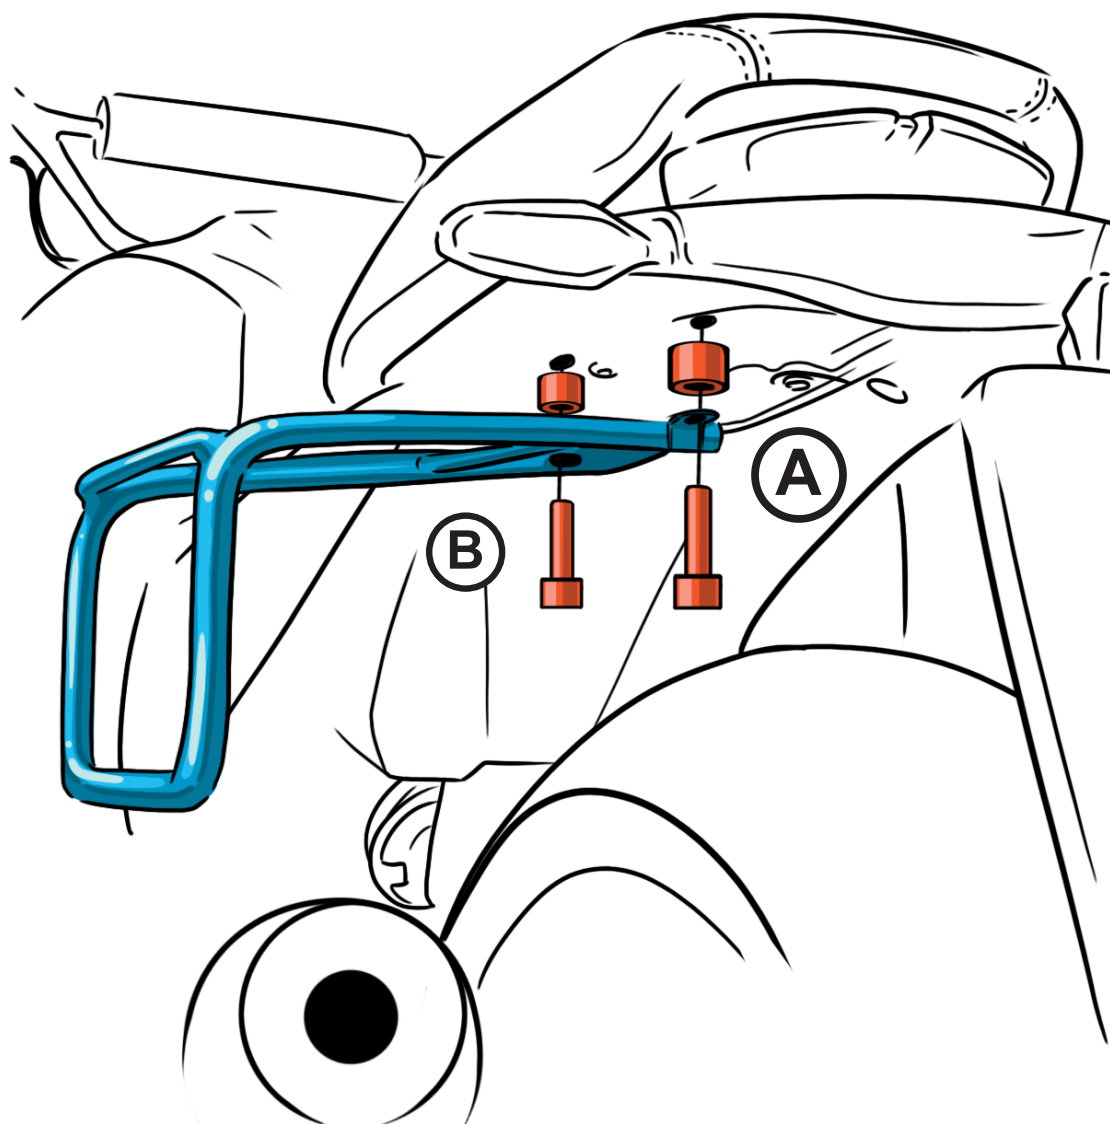


**ATTENZIONE!**Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.**WARNING!**Carefully read the '*Important informations*' sheet before starting.

**EN\_**To make sure everything lines up perfectly, follow the instructions, keeping all screws loose. Only when everything is mounted will all screws be tightened.

Position the frame and secure as indicated in the diagram, using the M6 screw in A and the M8 screw in B, and place the relative shims supplied in the kit between the frame and the motorbike.

Finish by tightening all screws.

**IT\_**Per assicurarsi che tutto si allinei perfettamente, seguire le istruzioni riportate di seguito, mantenendo tutte le viti lente. Solo a montaggio ultimato serrare tutte le viti.

Posizionare il telaio e fissare come indicato nello schema, utilizzando la vite M6 in A e la vite M8 in B, e interporre i relativi spessori forniti nel kit fra il telaio e la moto.

A lavoro ultimato stringere tutte le viti.

